
## **INSTALLATION INSTRUCTIONS**



ATRO PART NUMBER KT59-62001, KT59-62001-HT, KT59-62001-HW, KT59-62004-HT & MM59-62001

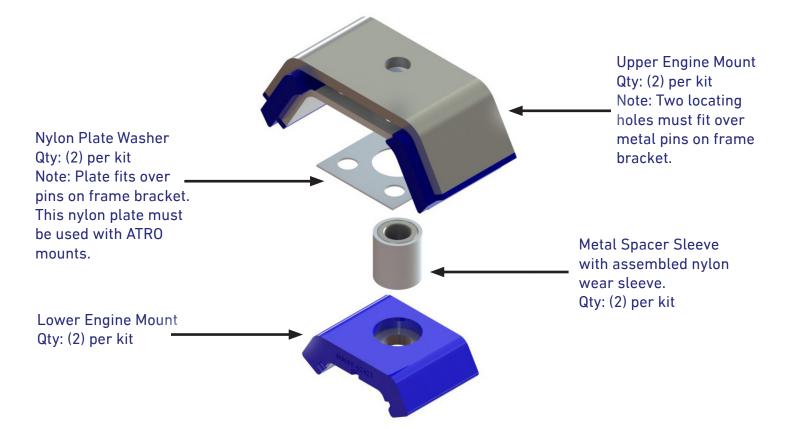

## NOTES:

- 1. It is recommended that new fasteners of same tensile strength be used when replacing mounts.\*
- 2. Do not mix rubber mounts of any combination with ATRO polyurethane mounts.
- 3. Torque all fasteners to factory specifications.
- \* KT59-62001-HW, KT59-62004-HT & MM59-62001 kits include hardware.



## POLYURETHANE PARTS | SOLUTIONS FOR HEAVY TRUCKS

ATROBUSHING.COM ©2018 Atro Engineered Systems, Inc. 6 Bolte Lane St. Clair, Missouri 63077 | U.S.A. (800) 325.6114 | Fax (866) 920.2005

FI IABI F

FNGINFFRFD

MANUFACTURED IN ST. CLAIR. MISSOURI U.S.A.

DC00-10012 Rev. C

ATROBUSHING.COM | 1.800.325.6114

ATRO is not liable for any errors herein. All manufacturers' names and part numbers used are trademarked by the respective manufacturer. These names and part numbers are being used without permission. No endorsement, affiliation or recommendation is implied. They are included for reference purposes only.