INSTALLATION INSTRUCTIONS




EB50-21013 BAR PIN BUSHING KIT

HENDRICKSON RS, RT, HN, HAULMAAX® SUSPENSIONS

- 1. Remove old bushing from beam.
- 2. Press new bushing into beam with PT50-21013 installation tool (or equivalent)
- 3. Install beam, using 4 spacer washers (thick) for spacing and/or alignment between bar pin and bracket as needed.
- 4. Use 4 flat washers (thin) outside of bracket for bracket to bolt head and bracket to nut.

KIT CONTAINS:

- (1) bar pin bushing
- (2) bolts
- (2) lock nuts
- (4) spacer washers
- (4) flat washers

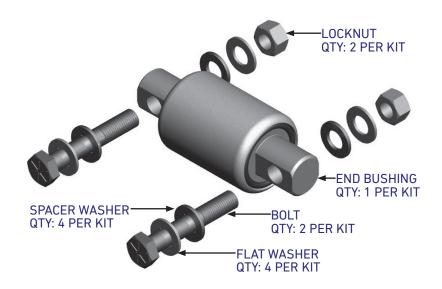





POLYURETHANE PARTS | SOLUTIONS FOR HEAVY TRUCKS

ATROBUSHING.COM ©2017 Atro Engineered Systems, Inc. 6 Bolte Lane St. Clair, Missouri 63077 | U.S.A. (800) 325.6114 | Fax (866) 920.2005

ATROBUSHING.COM | 1.800.325.6114